


Boarding:

Once inflated the Jon Buoy Module can be boarded.

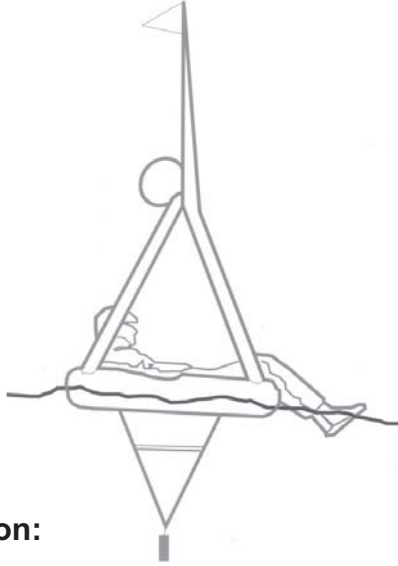

Recovery Operation:

To recover the Jon Buoy Module, attach a halyard or line to the webbing strap, and winch the Occupant and the Module back on board.



JON BUOY[®]

Jon Buoy Recovery Module

Mk4

Installation & Operating Instructions



Ocean Safety Limited
Saxon Wharf
Lower York Street
Southampton
SO14 5QF
United Kingdom

Tel: +44 (0) 23 80 72 08 00
Fax: +44 (0) 23 80 72 08 01
www.oceansafety.com

For a full list of approved JonBuoy service agents please see our website.

Positioning on the Vessel:

The Jon Buoy can be mounted to any standard rail, using the clamps and lashings provided. Wherever possible the Jon Buoy should be mounted to the stern. Always mount the Jon Buoy away from direct contact from waves or direct flow of water down the side of the vessel.

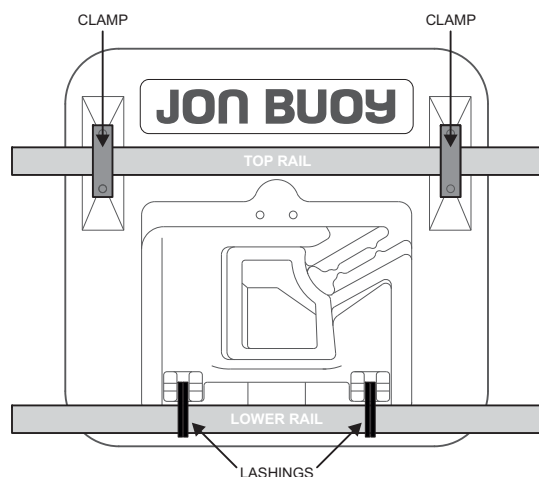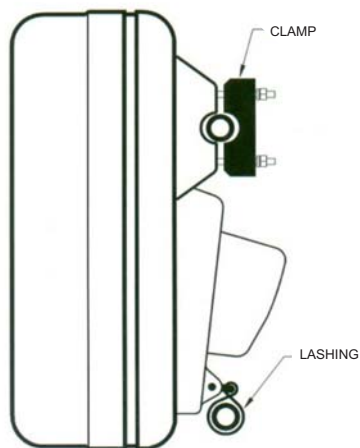

Installation:



Position the clamps on the Back Plate over the top rail and tighten. Then lash the Back Plate to a lower rail using the loops and lashings.

Servicing:

It is recommended that the Jon Buoy is serviced **Annually** at an approved Jon Buoy service station.

Launching:

Pull the release lever down through 90°

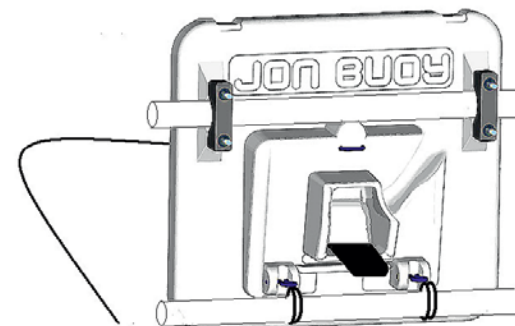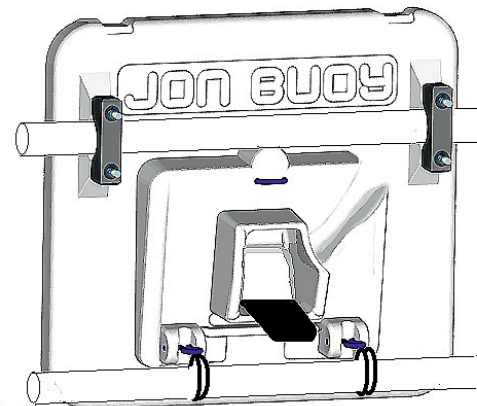

Upon release the module will automatically fall outboard and inflation will be initiated.