


Recovery Operation Instructions:

Once inflated the Jon Buoy Module can be boarded.

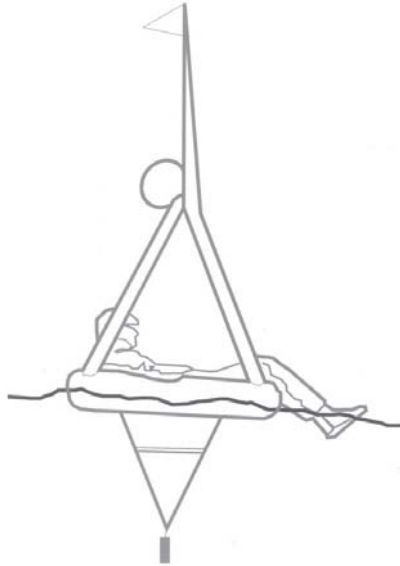

To recover the Jon Buoy Module, attach a halyard or line to the webbing strop, and winch the Occupant and the Module back on board.



JON BUOY[®]

Jon Buoy Recovery Module Mk 4

Manual Bulk Head Mounted Model

Installation & Operating Instructions

Ocean Safety Limited
Saxon Wharf
Lower York Street
Southampton
SO14 5QF
United Kingdom

Tel: +44 (0) 23 80 72 08 00
Fax: +44 (0) 23 80 72 08 01
www.oceansafety.com


For a full list of approved JonBuoy service agents please see our website.

Installation Instructions:

1. Remove the Jon Buoy Module from its Stainless Steel Cradle using the Handle on the top of the unit.

WARNING: DO NOT PULL ON OR OPEN THE BLUE FLAP AT ANY TIME AS THIS WILL OPERATE THE JONBUOY.

2. Position the Stainless Steel Cradle on the Bulkhead, mark and drill the holes in the Bulkhead to line up with holes in the Cradle.

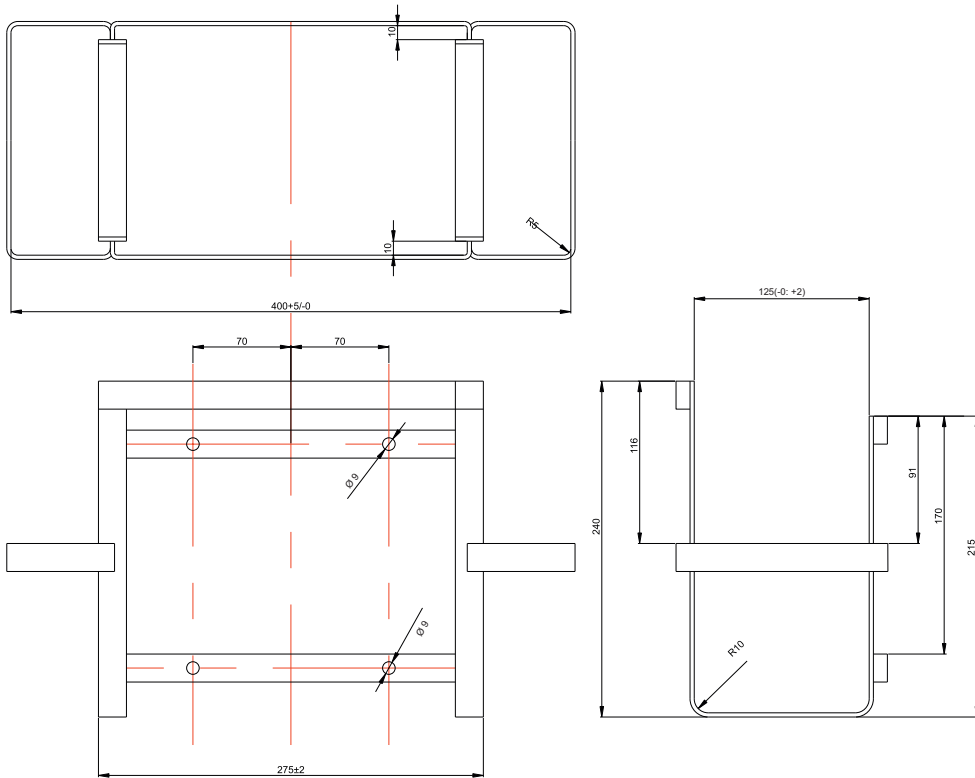

3. Screw or Bolt the Cradle in position.

4. Take care to ensure that the Jon Buoy Module is positioned with the vertical arms of the Cradle located in the channels at the front of the Container.

The handle of the Jon Buoy is to be uppermost and the JonBuoy Logo is to be facing outwards.



Operating Instructions:

1. Remove the Jon Buoy Module from its Stainless Steel Cradle using the Handle on the top of the unit.

2. Locate the operating line on the back of the Module and attach to a strong point on the vessel.

**IMPORTANT NOTE:
THE OPERATING LINE MUST BE SECURED TO A STRONG POINT BEFORE
LAUNCHING OR THE MODULE WILL NOT OPERATE.**

3. Throw the Module over the side and pull the line to inflate the Jon Buoy.

4. Once inflated the Recovery Operation can begin.