

JON BUOY[®]

HORSESHOE SOFTCASE

Owner's Manual

REV01

**YOUR SAFETY
OUR WORLD**



This manual is the property of Ocean Safety Limited and its associated or subsidiary companies.

It must not be copied without prior written permission from Ocean Safety Limited or its associated or subsidiary companies.

All rights reserved.

1.0	INTRODUCTION	P3
	1.1 Features	P3
	1.2 Health and Safety	P3
	1.3 Deployment	P3
2.0	USING THE JON BUOY SOFTCASE	P4
	2.1 Preparation for MOB Situation	P4
	2.2 Deploying the Jon Buoy Softcase	P5
3.0	INSTALLATION	P6
	3.1 Fixing pack	P6
	3.2 Positioning	P7
	3.3 Rail mounted orientation	P8
	3.4 Rail mount vertical	P9
	3.5 Rail mount horizontal	P10
	3.6 Bulkhead mount	P11
	3.7 Removing the softcase	P12
4.0	CARE AND MAINTENANCE	P13
	4.1 After use	P13
	4.2 Storage and removal	P14
5.0	SERVICING	P15
	5.1 Warranty	P16
6.0	SERVICE RECORD	P17

Thank you for purchasing this Ocean Safety product. Please follow the assembly, mounting, usage and maintenance instructions to ensure the product is fitted safely and correctly.

1.1 FEATURES

- Compact and lightweight
- Quick and easy to deploy
- Rescue handle
- Clear printed instructions
- Automatic inflation
- Retro-reflective tape
- 3 year service intervals

1.2 HEALTH AND SAFETY

DO NOT use abrasive or chemical cleaners as these may damage the product.

1.3 DEPLOYMENT

1.3.1 Please read the instructions on the back of the of the Jon Buoy Softcase for deployment. To access the deployment video use the QR code below or go to www.oceansafety.com. This is to be used alongside the user manual.




WARNING: PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE



2.1 PREPARATION FOR A MOB SITUATION

2.2.1 In the event that the Jon Buoy Softcase is required, it is critical to understand how it works and to devise a plan for an emergency situation.

2.2.2 Below is a simple diagram of a MOB situation, from deployment to coming alongside the casualty;

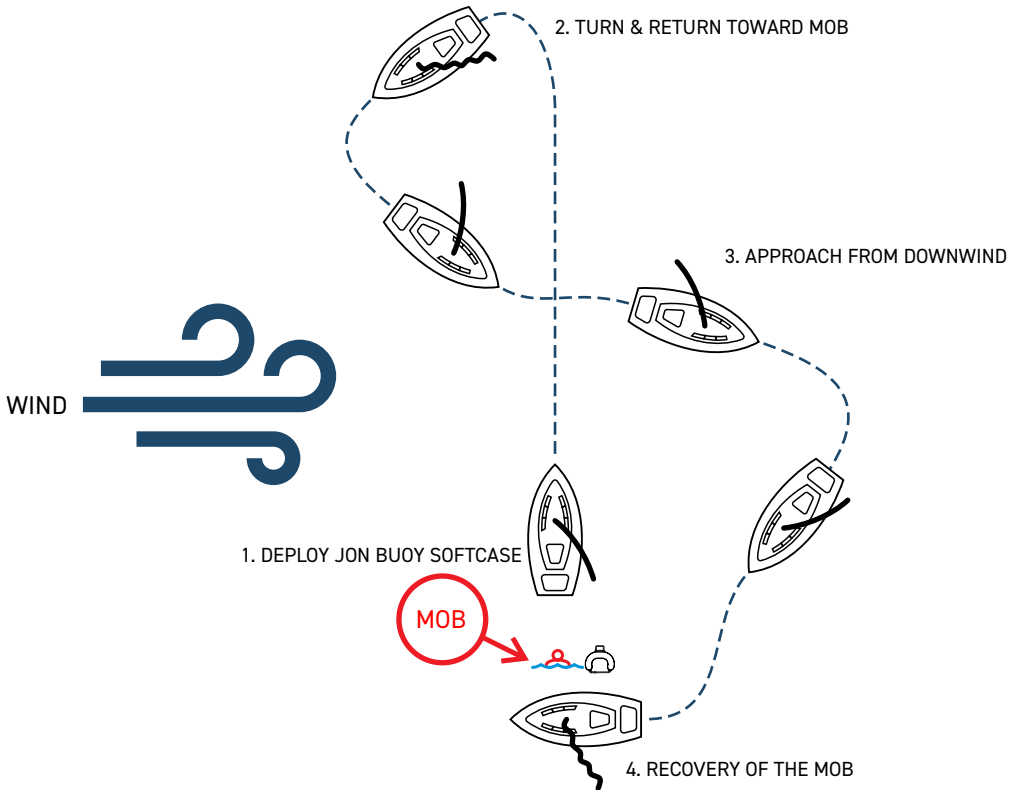


WARNING: ENSURE ALL CREW MEMBERS ARE TRAINED IN THE USE OF THE JON BUOY SOFTCASE AND IN THE MOB PROCEDURE




2.2 DEPLOYING THE JON BUOY SOFTCASE

2.2.1 Release buckle and pull softcase out of backplate.

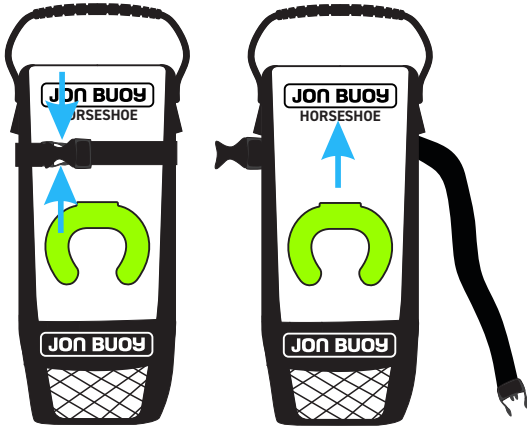


2.2.2 Pull release tag.

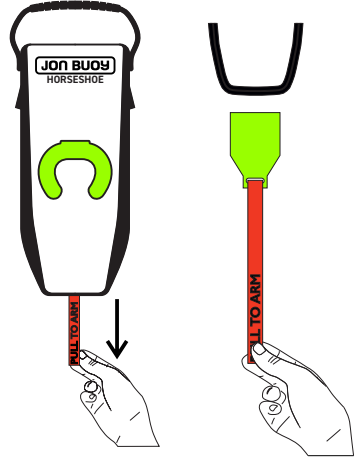


2.2.3 Throw overboard




2.2.4 Deployment

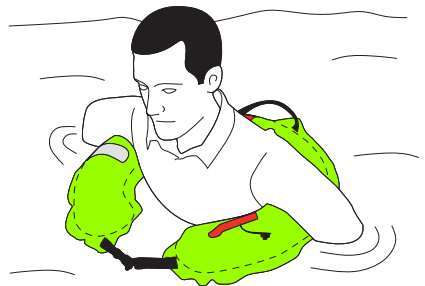


3.1 FIXING PACK

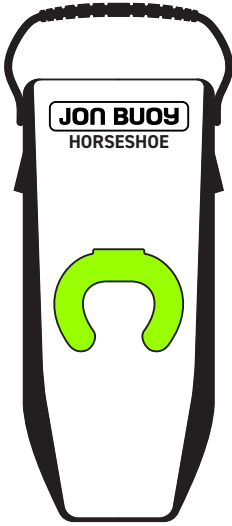

A. Jon Buoy Softcase

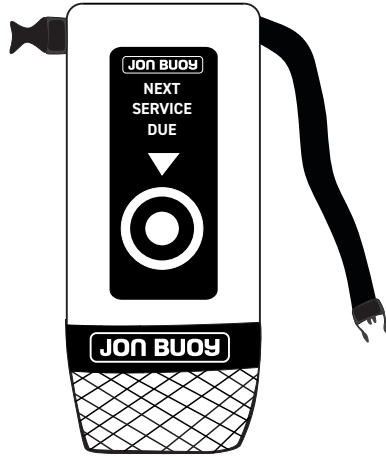

B. Jon Buoy Softcase backplate

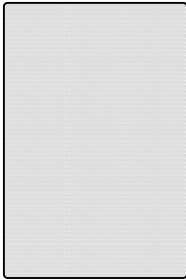

C. Self adhesive velcro
(applied to the back of backplate)



D. X2 Rail mounting straps


3.2 POSITIONING

3.2.1 The Jon Buoy Softcase can either be rail or bulkhead mounted. For rail mounting, follow section 3.4 or 3.5 and for bulkhead mounting follow section 3.6.

3.2.2 Rail Mounted

This Jon Buoy Softcase can be positioned on a rail, vertically or horizontally. It is essential that there are no obstructions affecting the fitting or usage of the Jon Buoy.


If the Jon Buoy is affected by an obstruction Ocean Safety will not be liable for any failure of the product or its operation.

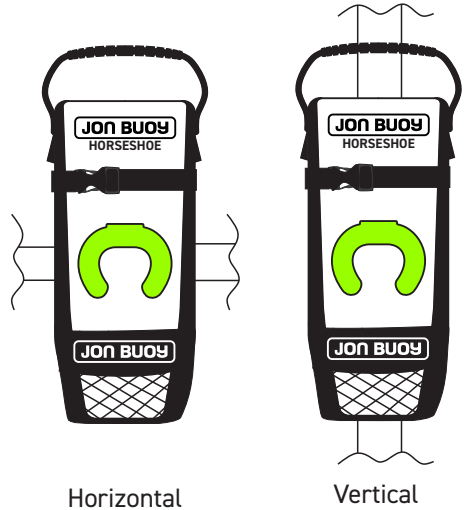

3.2.3 Bulkhead Mounted


This Jon Buoy can be mounted on a bulkhead.

If the Jon Buoy Softcase is fitted on to an unsuitable bulkhead, Ocean Safety will not be liable for any failure of the product and its operation.

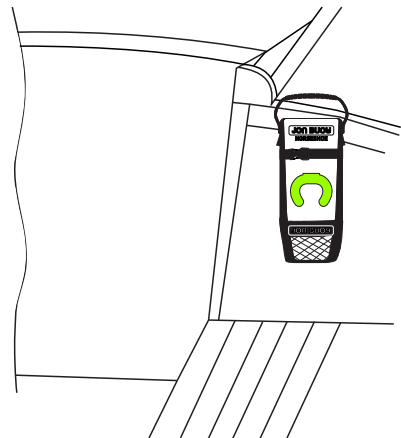


3.3 RAIL MOUNTED ORIENTATION

3.3.1 If rail mounted ensure the unit is facing inboard on the vessel as shown below.

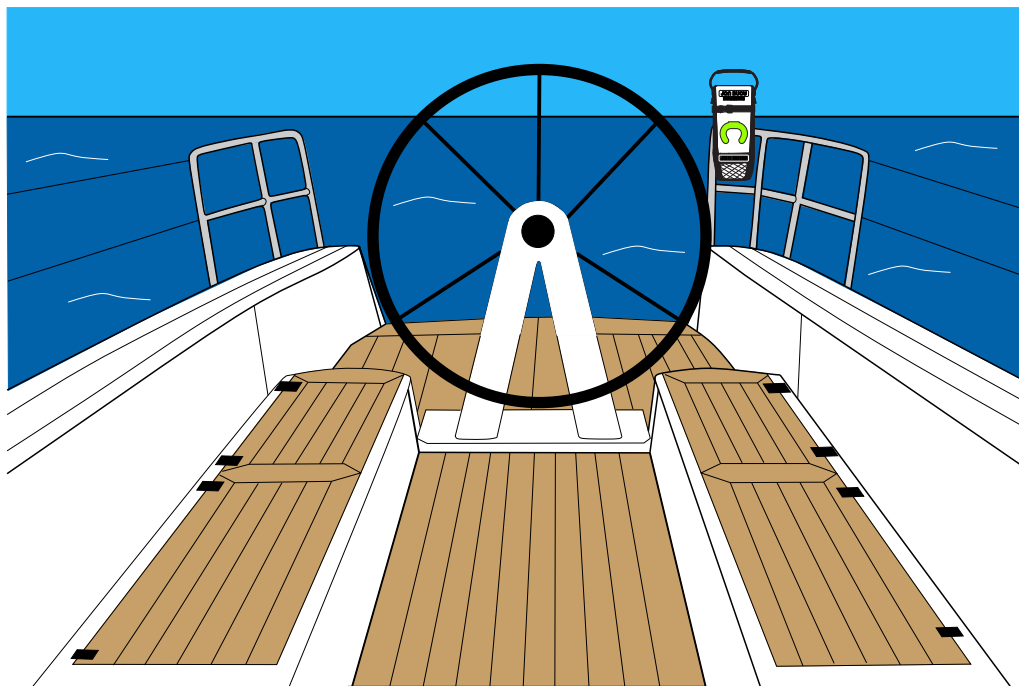


3.4 RAIL MOUNT VERTICAL


3.4.1 Peel off the white velcro from the backplate. Retain for bulkhead mounting in the future.

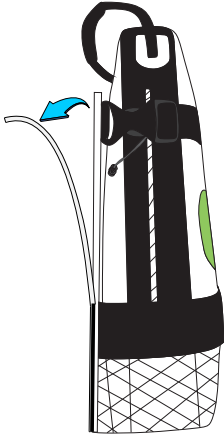


3.4.2 Apply the rail mounting straps to the black velcro on the backplate. Position at the top and bottom of the backplate.

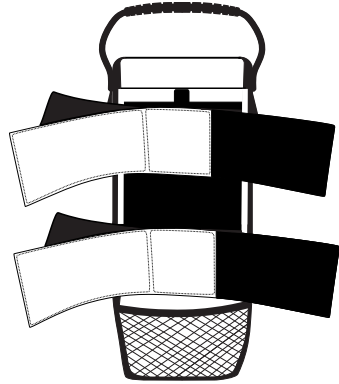

3.4.3 Wrap the white protection patch around the rail tightly. Secure with the loose velcro patch on the right.

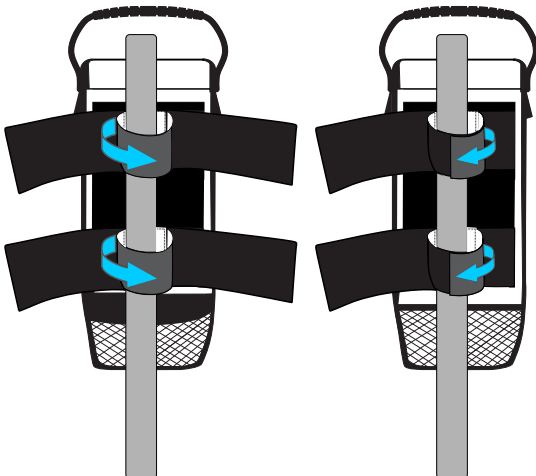


3.4.4 To secure, wrap the loose velcro patch on the left around the rail.

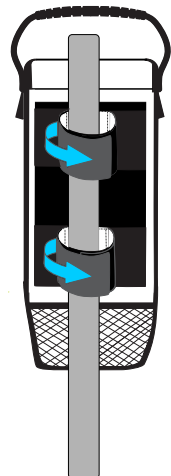


3.5 RAIL MOUNT HORIZONTAL


3.5.1 Peel off the white velcro from the backplate. Retain for bulkhead mounting in the future.

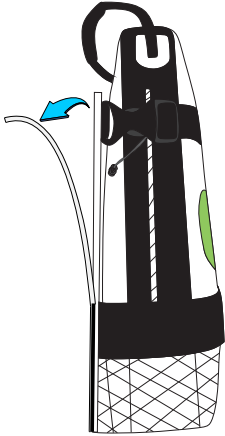


3.5.2 Apply the rail mounting straps to the velcro on the backplate. Position in the centre of the backplate.

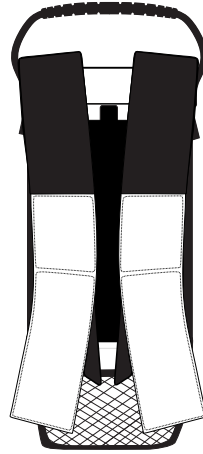

3.5.3 Wrap the white protection patch around the rail tightly. Secure with the loose velcro patch on the top.

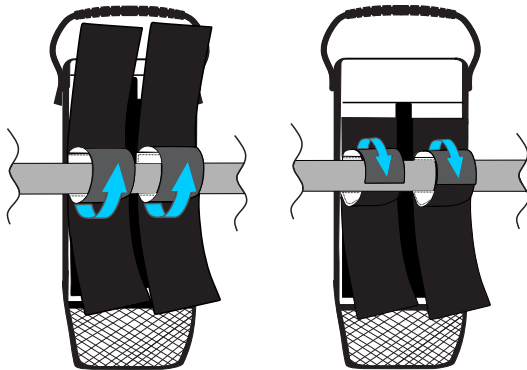


3.5.4 To secure, wrap the loose velcro patch on the bottom around the rail.

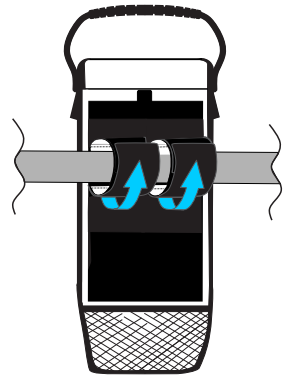

3.6 BULKHEAD MOUNT


3.6.1 Peel off the white velcro from the backplate. Retain for the rail mounting straps for mounting in the future.

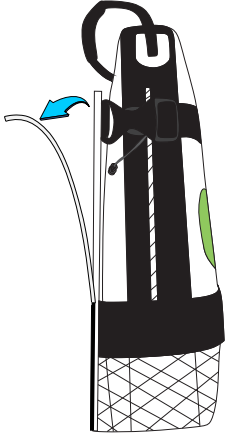


3.6.2 Peel off the adhesive backing on the white velcro patch.




3.6.3 Apply white velcro patch onto the bulkhead, applying pressure. Leave for 24hours to set.

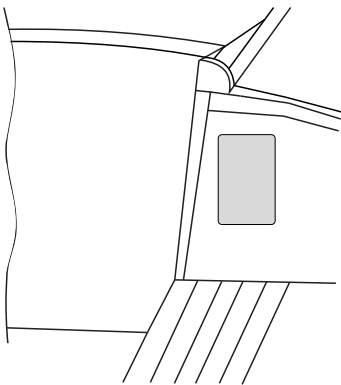



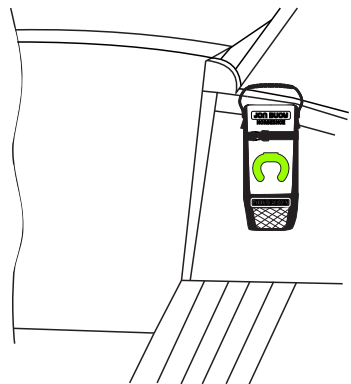

3.6.4 Firmly push the softcase and backplate onto the velcro patch.

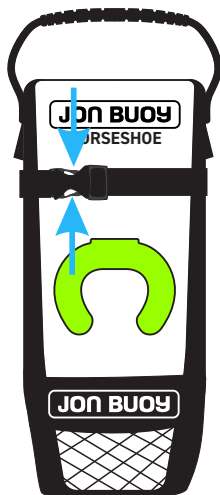

3.7 REMOVING THE SOFTCASE




 NOTE: IF THE SOFTCASE NEEDS TO BE REMOVED FROM THE MOUNTING BRACKET FOR STORING OR SERVICING, ENSURE THE BUCKLE IS UNCLIPPED BEFORE REMOVING. 

 NOTE: DEPLOYMENT INSTRUCTIONS ARE PRINTED ON THE BACK OF THE SOFTCASE. ENSURE ALL CREW ARE COMPETENT IN USING THE SOFTCASE BEFORE LEAVING THE DOCK. 

4.1 AFTER USE

4.1.1 To deflate the Jon Buoy, locate the oral tube valve on the module. Depress the oral tube valve by using the cap on the tube and squeeze all the air out of the module.

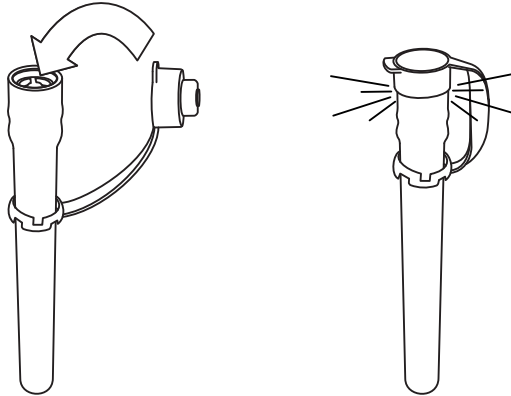

4.1.2 Rinse the Jon Buoy with fresh water and leave to drip dry in a cool and well ventilated area.

4.1.3 Once dry and deflated, pack the Jon Buoy and send to the nearest Ocean Safety Approved Service Station.

4.1.4 To find the nearest Ocean Safety Approved Service Station, visit the website or contact Ocean Safety:



Tel: +44 (0) 2380 720800

Email: info@oceansafety.com

Web: www.oceansafety.com



WARNING: NEVER ATTEMPT TO RE-PACK THE JON BUOY SOFTCASE FOR RE-USE. ONLY TRAINED PERSONNEL AT AN OCEAN SAFETY APPROVED SERVICE STATION CAN RE-PACK AND RE-ARM A JON BUOY TO THE NECESSARY STANDARD REQUIRED.



4.2 STORAGE AND REMOVAL

4.2.1 Ocean Safety recommend that if the vessel is not in use, the Jon Buoy Softcase is removed and kept in a dry storage facility. This will prolong the life of the Jon Buoy Softcase. Ensure the arming line is un-clipped before doing so.

4.2.2 Alternatively, cover the Jon Buoy Softcase with a waterproof cover.

4.2.3 It is the owners responsibility to remove any protective cover should the vessel be in use. Failure to do so may result in the failure of the product to deploy properly.

5.0.1 The Jon Buoy must be serviced every three years at an Ocean Safety Approved Service Station.

5.0.2 The recommended first service date is defined by the black sticker on the rear of the container. The outer number denotes month and year is indicated in the centre of the circle.

5.0.3 A service every three years is essential to ensure the life of the product is prolonged and to maintain the Jon Buoy warranty.

5.0.4 To find the nearest Ocean Safety Approved Service Station, visit the website or contact Ocean Safety:



Tel: +44 (0) 2380 720800

Email: info@oceansafety.com

Web: www.oceansafety.com

5.1 WARRANTY

5.1.1 Ocean Safety extended warranty is only valid if the product has been registered by the owner. If the owner has not registered the product with Ocean Safety, the warranty is only valid for 1 year from date of purchase.

5.1.2 Ocean Safety warranty does not cover damage resulting from accidents, neglect or normal wear and tear and is only valid if a full service history, carried out by an approved Ocean Safety service centre, is available.

5.1.3 Visit the Ocean Safety website for full warranty details and for extended warranty durations.

6.0 SERVICE RECORD



Signature & Stamp	Comments	Repairs and/or Replacements	Modifications	Service Station Address	Date of Service

JON BUOY®

OCEAN SAFETY
Saxon Wharf
Lower York Street
Southampton
Hampshire
SO14 5QF

Tel: +44 (0)2380 720800
Email: info@oceansafety.com
Web: www.oceansafety.com

